



 
DEUTSCH
ENGLISH
FRANÇAIS
NEDERLANDS
ITALIANO

ESPAÑOL
PORTUGUÊS
SVENSKA
ČEŠTINA
SLOVENSKÝ

Hersteller

Wörlein GmbH
Gewerbestr. 12
D 90556 Cadolzburg
GERMANY

Tel.: +49 9103/71670
Fax.: +49 9103/716712
Email: info@woerlein.com
Web: www.woerlein.com

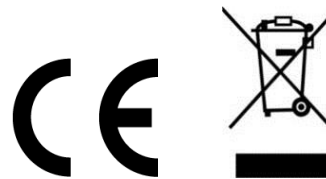

ENVIRONMENTAL PROTECTION



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.


	WARNING Risk of electric shock Do not open!	
Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.		



This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.



 This symbol indicates the presence of important operating and maintenance instructions for the device



Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are legally obligated to return all batteries for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*)

Return batteries free of charge to public collection points in your community or shops selling batteries of the respective kind. Only return fully discharged batteries

*) marked Cd = cadmium, Hg = mercury, Pb = lead

- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!!
- Keep batteries away from children. Children might swallow batteries.
- Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION: Danger of explosion if battery is incorrectly replaced
- Replace only with the same or equivalent type

	CAUTION - INVISIBLE LASER RADIATION WHEN OPENING THE COVER OR PRESSING THE SAFETY INTERLOCK. AVOID EXPOSURE TO THE LASER BEAM.
--	---

 


To prevent possible hearing damage, do not listen at high volume levels for long periods

- Use the device in dry indoor environments only.
- Protect the device from humidity.
- This apparatus is for moderate climates areas use, not suitable for use in tropical climates countries.


- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug or an appliance coupler is used as the disconnect device, the disconnect devices shall remain readily operable.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
- Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- When you are necessary to ship the unit store it in its original package. Save the package for this purpose.
- In case of malfunction due to electrostatic discharge or fast transient (burst), remove and reconnect the power supply.
- If the unit is not using for a long period of time, disconnect it from the power supply by unplugging the power plug. This is to avoid the risk of fire.

LOCATION OF CONTROLS

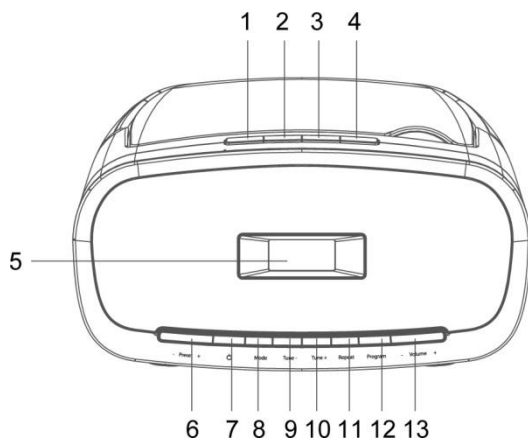


- | | | |
|-----------------------|----------------|--------------------|
| 1 Play / Pause button | 6 Preset + / - | 11 Repeat / Random |
| 2 Skip backward | 7 Power On/Off | 12 Program |
| 3 Skip forward | 8 Mode button | 13 Volume + / - |
| 4 Stop button | 9 Tune - | |
| 5 LCD Display | 10 Tune + | |

 FRONT VIEW

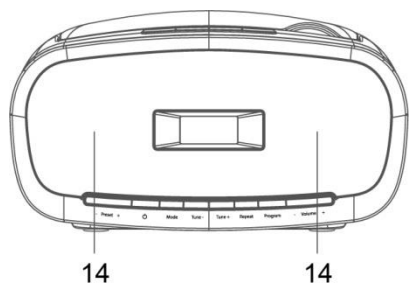


- 14 Speaker

 BACK VIEW

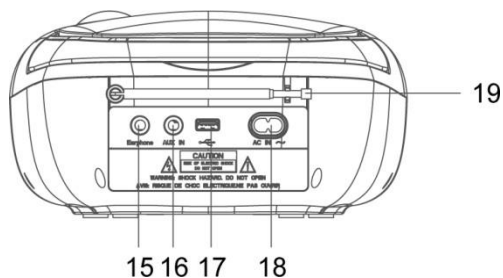


- | | | |
|-------------|-------------|---------------|
| 15 Earphone | 17 USB Port | 19 FM antenna |
| 16 Aux-In | 18 AC inlet | |

 TOP VIEW

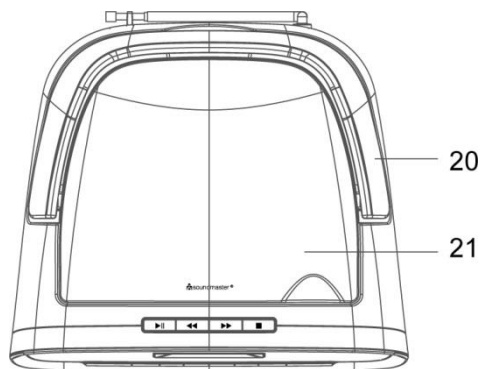

- 20 Handle
21 CD door

 
BOTTOM VIEW

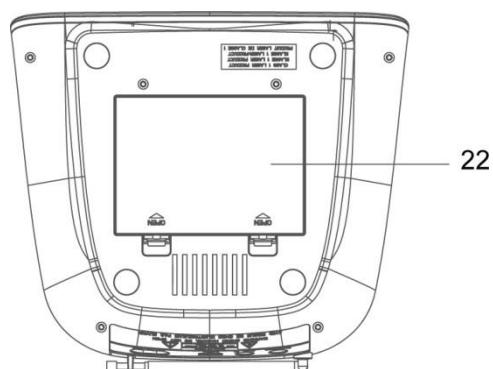


- 22 Battery door

INSTALLATION

AC Operation

1. Insert one end of the AC power cord to the AC input socket located at the back of the unit.
2. Plug the AC power cord to the AC mains outlet.
3. Press the  button once to turn the unit on.

DC (Battery) Operation

1. Ensure the power cord is disconnected from the AC mains and the unit.
2. Installed the batteries (6 X 1.5V C Size) into the battery compartment. Please ensure that the polarity is correct (see the floor of the battery compartment)!
3. Press the  button once to turn the unit on.

Note: To obtain the best performance in DC operation, the use of alkaline batteries is highly recommended.

Display Backlight

When the unit is switched on (in AC or DC battery operation) the display backlight will be turned on to full brightness and go to dim after around 10 seconds. Press a key will turn it to full brightness again for around 10 seconds.

NOTE:

When a mains cable is connected the batteries are automatically switched off.

After about 15 minute without a signal, the device will automatically switch to standby.

RADIO

The FM telescopic antenna is located at the left side of the unit, you should fully extend and adjust its position and direction until you find the best reception.

When the unit is powered up and switched to on for the first time, it will automatically enter into the FM Radio mode. The display will show FM and the frequency.

To select the FM mode during other operation modes, repeatedly press the “**Mode**” button until the display shows FM and the frequency.

Automatic Memory Scan (AMS)

During FM operation, press and hold the “**Program**” button until it starts to scan the entire frequency band, the found stations will be automatically stored into the preset memories.

Note: Once the AMS is conducted, all previous preset stations in the memory will be overridden.

Automatic Tuning

1. Press and hold the “**Tune +**” or “**Tune –**” button for longer than 2 seconds to scan up or down the frequency band for stations, and it will automatically stop on the first found station of sufficient signal strength.
2. Repeat the above procedure if you want to search for another station.

Manual Tuning

You can use the manual tuning to tune to weak stations or your desired frequency.

1. During FM operation, repeatedly press the **“Tune +”** or **“Tune –”** button until you read your desired frequency or the reception is at its best.
2. The stereo icon will be displayed if a FM stereo station is received. To switch between stereo and mono, press the **■** button.

Programming Preset Stations

You can program stations of your choice and store up to 20 stations into its memories.

1. First tune to your desired station, then press the **“Program”** button once and the display will show **“P-01”** and flash, press the **“Preset +”** or **“Preset –”** button to select the preset number.
2. When your desired preset number appears on the display, press the **“Program”** button again to confirm, the current station will be stored into your desired preset number.
3. Repeat the steps 1 and 2 to program more preset stations, storing a new station into a preset location will erase the previous stored station in that location.

Recalling the Stored Preset Stations

To recall the stored preset stations, repeatedly press the **“Preset +”** or **“Preset –”** button until you see your desired preset number, the associated frequency will be displayed.

CD

NOTE: Although this CD/MP3 player can read CD-R and CD-RW discs in addition to normal CDs, the playability of CD-R and CD-RW discs may be affected by the type of software that was used to create the discs, as well as the quality and condition of the blank media you are using, 100% playability cannot be guaranteed. This is not an indication of a problem with the player.

Playing the CD

1. To select CD mode, repeatedly press the **“Mode”** button until **“CD”** is displayed.
2. Open the CD door and load the disc with the printed label side facing up and close the CD door. The display will finally show the total number of tracks. If a CD/MP3 disc is being played, the display will show **“MP3”**.
3. Press the **▶||** button to start playback from the beginning, and you can now press the **▶||** button to toggle select between the playback **“PAUSE”** and **“PLAY”** function.
4. To skip forward or back to other tracks during playback, press the **◀◀** or **▶▶** button.
5. To select other folders in the CD/MP3 disc, press the **“Preset +”** or **“Preset –”** button.
6. To stop playback, press the **■** button.

Repeat and Random Play

During playback, you can press the **“Repeat”** button to select the repeat and random playback function:

1. To repeat the same track, press **“Repeat”** button once, the display will show **“Repeat One icon”**.
2. To repeat the entire disc, press the **“Repeat”** button again, the display will show **“Repeat All icon”**.
3. If you are playing a MP3 disc, an additional **“FOLDER”** option will appear. This will repeat the current folder.

4. To start random playback, repeatedly press the **“Repeat”** button until **“RAND”** appears in the display.
5. To resume normal playback, repeatedly press the **“Repeat”** button until the **“Repeat”** or **“RAND”** icon disappears in the display.

Program Play

You can use the program play feature to play up to 20 tracks on a disc in any desired order. You may also program a particular track to play several times within a programmed sequence.

1. Load your disc as usual and wait until the display shows the total number of tracks on the disc.
2. Ensure it is in CD stop mode, press the **“Program”** button once, the display will show **“P 01”**.
3. Press the **◀◀** or **▶▶** button to select the first track number to be programmed. When your desired track number appears in the display, press the **“Program”** button to confirm and the first track to play is programmed. The program memory number will advance to **“P 02”** and ready for the next entry.
4. If a MP3 disc is being loaded, press the **“Preset +”** or **“Preset –”** button to select folder.
5. Repeat the above steps to program other tracks, a maximum number of 20 tracks (99 for MP3) can be programmed. When you have completed programming, press the **▶||** button to begin program play, playback will be started on the first track that you have programmed and will continue until the last programmed track has played.
6. When the program play is completed, the player stops and it will remain in the program play mode as long as the **“Program Play icon”** is displayed. Press the **▶||** button will play the programmed sequence again.
7. To erase the program, press the **■** button once in CD stop mode; and press the **■** button twice during CD play, the **“Program Play icon”** will disappear in the display.

Repeat Program Play

You may use the program play and the repeat play features together to continuously repeat a programmed playback. First program the desired playback sequence, then press the **“Repeat”** button to select repeating the current track (Repeat One) or the entire programmed sequence (Repeat All).

USB

1. To select USB mode, repeatedly press the **“Mode”** button until **“USb”** is displayed.
2. Insert your USB memory device into the USB port (located at the back of the unit), the display will show the total track number and you can now start your USB/MP3 playback operation.
3. To interrupt or start playback, press the **▶||** button.
4. To skip forward or back to other tracks during playback, press the **◀◀** or **▶▶** button.
5. To select other folders, press the **“Preset +”** or **“Preset –”** button.
6. To stop playback, press the **■** button.

Repeat, Random and Program Play is the same as in CD-Mode.

AUX-IN

A 3.5mm stereo AUX IN socket is located at the back of the unit. Analogue audio sound signals from other sources can be input to the unit through this socket.

1. Use a cable with 3.5mm jack to connect the input to other analogue audio source.
2. To select AUX IN, repeatedly press the “**Mode**” button until “AU” is displayed.
3. Press the **Volume +/-** button to adjust for your desired sound output level.

HEADPHONE

A 3.5mm type stereo headphone jack is located at the back of the unit. Connect a stereo headphone (not included) to this jack for private listening without disturbing others. The speakers are automatically disconnected when the headphones are in use.

IMPORTANT: When using headphones always set the volume to a low level before you put the headphones on. Then insert the headphones and gradually increase the volume to a comfortable listening level.

TECHNICAL SPECIFICATION

Power input	: 100-240V~ 50/60Hz
Battery power	: 6 x 1,5V “C”-size battery (not included)
FM range	: 87.5 – 108MHz
Preset Stations	: 20
Audio power output	: 2x 1W RMS

IMPORTER

Wörlein GmbH	Tel.:	+49 9103 71 67 0
Gewerbestr. 12	Fax.:	+49 9103 71 67 12
D 90556 Cadolzburg	Email:	service@woerlein.com
Germany	Web:	www.woerlein.com

Technische Änderungen und Druckfehler vorbehalten

Copyright by Woerlein GmbH, 90556 Cadolzburg, www.woerlein.com

Vervielfältigung nur mit ausdrücklicher Genehmigung der Woerlein GmbH



Hiermit bestätigt Wörlein GmbH, dass sich dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet.

Eine Kopie der Konformitätserklärung kann unter folgender Adresse bezogen werden.
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany
Email: info@woerlein.com
Tel.: +49 9103 71 67 0

Hereby, Wörlein GmbH declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

A copy of the Declaration of Conformity may be obtained at the following location:
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany
Email: info@woerlein.com
Tel.: +49 9103 71 67 0

Par la présente, Wörlein GmbH déclare que cet appareil est conforme aux exigences principales et autres clauses applicables de la Directive 2014/53/EU.

Vous pouvez demander de recevoir une copie de la déclaration de conformité en écrivant à l'adresse suivante :
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany
Email: info@woerlein.com
Tel.: +49 9103 71 67 0

Wörlein GmbH verklaart hierbij dat dit apparaat in overeenkomst is met de essentiële vereisten en andere relevante bepalingen van de Richtlijn 2014/53/EU.

Er kan een kopie van de Conformiteitsverklaring worden verkregen op de volgende locatie:
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany
Email: info@woerlein.com
Tel.: +49 9103 71 67 0

Con la presente, Wörlein GmbH dichiara che questo dispositivo è conforme ai requisiti essenziali e altre disposizioni contenute nella Direttiva 2014/53/EU.

Una copia della Dichiarazione di conformità è disponibile al seguente indirizzo:
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germania
Email: info@woerlein.com
Tel.: +49 9103 71 67 0

Härmed Wörlein GmbH deklarerar att denna enhet är i överensstämmelse med de grundläggande kraven och andra relevanta bestämmelser i direktiv 2014/53/EU.

En kopia av försäkran om överensstämmelse kan erhållas på följande plats:
Wörlein GmbH, Gewerbestrasse 12, D 90.556 Cadolzburg, Tyskland
E-post: info@woerlein.com
Tel.: +49 9103 71 67 0

Herved Wörlein GmbH erklærer, at denne enhed er i overensstemmelse med de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.

En kopi af Overensstemmelseserklæringen kan fås på følgende placering:
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Tyskland
E-mail: info@woerlein.com
Tel.: +49 9103 71 67 0

Tímto Wörlein GmbH prohlašuje, že toto zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.

Kopii Prohlášení o shodě lze získat v následujícím umístění:
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Německo
E-mail: info@woerlein.com
Tel.: +49 9103 71 67 0

Por este meio, Wörlein GmbH declara que este dispositivo está em conformidade com os requisitos essenciais e outras disposições da Directiva 2014/53/EU.

Uma cópia da Declaração de Conformidade pode ser obtida no seguinte local:
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Alemanha
Email: info@woerlein.com
Tel.: +49 9103 71 67 0