

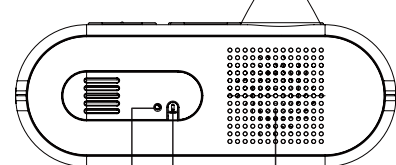



MUSE

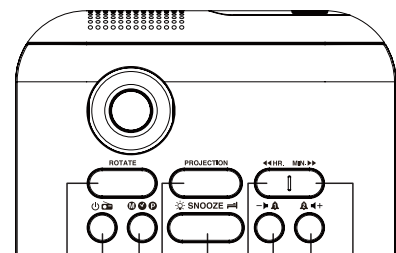

- FR Manuel de l'utilisateur
GB User Manual
PT Manual do Utilizador
DE Benutzerhandbuch
ES Manual de instrucciones
IT Manuale di istruzioni
NL Handleiding

M-179 P

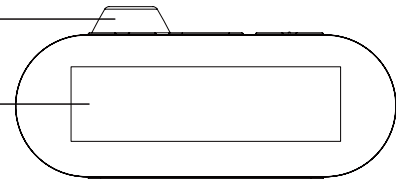

FR Lire attentivement les instructions avant de faire fonctionner l'appareil.

GB Please read the instruction carefully before operating the unit.

PT Leia este manual com atencao antes de qualquer utilizacao.

DE Bitte lesen sie dieses handbuch vor dem gebrauch der gerates sorgfaltig durch.

ES Antes de utilizar este aparato, lea atentamente las siguientes instrucciones

IT Leggere attentamente questo manuale prima di utilizzare l'apparecchio.

NL Lees deze handleiding aandachtig voor u het toestel gebruikt.

FR RADIO-REVEIL AVEC PROJECTION

EMPLACEMENT ET DESCRIPTION DES COMMANDES

- 1. Affichage LED
2. Projecteur d'horloge
3. ROTATE (PIVOTER): Afin de pivoter la projection de l'horloge
4. U / M Veillez/ Marche
5. R Réglage de l'horloge
6. PROJECTION: Projecteur M/A
7. Réglage d'intensité lumineuse de l'écran
8. HR. Réglage des heures
9. Volume descendant
10. Alarme 1
11. MIN. Réglage des minutes
12. Antenne filaire FM
13. Cordon d'alimentation
14. Haut-parleur
15. Compartiment à piles

ALIMENTATION

Secteur: 230V ~ 50Hz (norme CE)
Piles: 2x1.5V, type AAA/R03/UM4 (non fournies) pour la sauvegarde des mémoires

- 1. Insérez la prise du cordon d'alimentation dans une prise murale standard.
2. Installez les piles dans leur compartiment. Utilisez uniquement la taille et le type de piles spécifiées.

Système de sauvegarde: Tous les réglages sont conservés en mémoire, cependant, l'heure de l'horloge pourrait de temps en temps nécessiter un réajustement.

RÉGLAGE DE L'HEURE

ÉCOUTE DE LA RADIO

Recherche automatique
Appuyez et maintenez pendant quelques secondes pour lancer la recherche.

Recherche manuelle
Appuyez sur pour mettre l'appareil en marche.

Remarque: Au cours de l'opération de recherche le niveau sonore est automatiquement mis en sourdine.

STATIONS PRÉRÉGLÉES

Cet appareil peut mémoriser 20 stations FM.

MÉMORISATION MANUELLE

- 1. Sélectionnez une station radio manuellement ou en recherche automatique.
2. Appuyez sur pour mémoriser.

RÉGLAGE DE L'ALARME ET DU MODE DE RÉVEIL

- 1. En mode veille, appuyez plusieurs fois sur le bouton pour sélectionner le mode de réveil.
2. Appuyez et maintenez pendant quelques secondes.

ARRÊT DE L'ALARME

- 1. Répétition de l'alarme
2. Arrêt de l'alarme

ARRÊT DE L'ALARME

- 1. Répétition de l'alarme
2. Arrêt de l'alarme

ARRÊT DE L'ALARME

- 1. Répétition de l'alarme
2. Arrêt de l'alarme

ARRÊT DE L'ALARME

- 1. Répétition de l'alarme
2. Arrêt de l'alarme

ARRÊT DE L'ALARME

- 1. Répétition de l'alarme
2. Arrêt de l'alarme

ARRÊT DE L'ALARME

- 1. Répétition de l'alarme
2. Arrêt de l'alarme

ARRÊT DE L'ALARME

- 1. Répétition de l'alarme
2. Arrêt de l'alarme

FONCTION SOMMEIL

Cette fonction vous permet de régler une durée avant l'arrêt automatique de l'appareil.

- 1. Lorsque l'appareil est allumé, maintenez enfoncé le bouton pour accéder au mode mise en veille et appuyez plusieurs fois sur le bouton pour sélectionner les valeurs 05-10-15-30-45-60-90 ou 120 minutes d'écoute.

REMARQUES:

- 1. Cette fonction ne peut être réglée que lorsque l'appareil est en marche.

RÉGLAGE D'INTENSITÉ LUMINEUSE DE L'ÉCRAN

Appuyez sur pour sélectionner la luminosité de l'écran: Forte, Basse, ou Écran éteint.

PROJECTION DE L'HEURE

- 1. Allumez ou éteignez le projecteur avec la touche PROJECTION
2. Tournez la projection de l'heure de 180° avec la touche ROTATE.

FICHE TECHNIQUE

Alimentation: Secteur: 230V ~ 50Hz, consommation: 4W
Piles: 2x1.5V, type AAA/R03/UM4 (non fournies) pour la sauvegarde des mémoires

Radio: FM 87.5-108MHz

Par la présente, NEW ONE S.A.S déclare que l'appareil "MUSE M-179 P" est conforme aux exigences essentielles et autres dispositions pertinentes de la directive 2014/53/UE.

INSTRUCTIONS IMPORTANTES SUR LA SECURITE

ATTENTION: Pour réduire le risque de choc électrique, ne pas ouvrir l'appareil, il n'y a aucune partie à l'intérieur destinée à l'utilisateur.

L'éclair avec le symbole de la fêche dans le triangle est un signe d'alerte avertissant l'utilisateur de "tension dangereuse" à l'intérieur de l'unité.

Le point d'exclamation dans le triangle est un signe d'alerte avertissant l'utilisateur d'instructions importantes accompagnant le produit.

IMPORTANT

- Utilisez cet appareil sous un climat tempéré.
- La plaque signalétique se trouve au dessus de l'appareil.

Manual storage:

- 1. Select a radio station manually or in automatic search.
2. Press and hold "P 01" blinks on the screen.

Listen to station presets

Press and repeat the operation as many times as necessary to select your station.

SETTING THE ALARM AND THE ALARM MODE

- 1. In standby mode, press to select the source of wake up: or buzzer.
2. Press HR, and/or MIN. to set the time of wake up.

STOPPING THE ALARM

Press SNOOZE. The alarm stops and will sound again 9 minutes later.

2 - Alarm stop

Press or . The alarm will sound again the next day at the same time.

3 - Alarm Cancellation

In standby mode, press A to cancel the alarm permanently.

SLEEP FUNCTION

In sleep mode, the unit will turn off automatically after a specified time.

FR



Points de collecte sur www.quefairedesdechets.fr

Privilegiez la réparation ou le don de votre appareil!

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

GB PROJECTION CLOCK RADIO

LOCATION AND DESCRIPTION OF CONTROLS

- 1. LED display
2. Ré projector
3. ROTATE: To rotate the projected time.
4. U / M To turn unit on/off
5. Setting the clock
6. Memorization
7. Projection station
8. HR. Hour setting
9. Volume down
10. Alarm 1
11. Alarm 2
12. MIN. Minute setting
13. FM wire antenna
14. AC power cord
15. Speaker
16. Battery compartment

POWER SUPPLY

AC: 230V ~ 50Hz (CE)
DC: 2x1.5V, battery type AAA/R03/UM4 (not provided) for back-up
For optimal performance, alkaline batteries are recommended.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of electric shock, do not open the device, there is no party inside for the user.

IMPORTANT

- The use of apparatus in moderate climates.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.

SETTING THE TIME

- 1. In standby mode, press and hold O button, the display will flash, set the time with HR, hour and/or MIN. minutes.

LISTENING TO THE RADIO

- 1. Press O once to turn on the unit.
2. Choose your radio station with left or right arrow.
3. Adjust the volume by right or left arrow to the desired level.

Automatic search

Press and hold for few seconds left or right arrow. The automatic search locates strong stations.

Manual search

- 1. Select a radio station manually or in automatic search.
2. Press and hold "P 01" blinks on the screen.

Manual storage:

- 1. Select a radio station manually or in automatic search.
2. Press and hold "P 01" blinks on the screen.

Listen to station presets

Press and repeat the operation as many times as necessary to select your station.

SETTING THE ALARM AND THE ALARM MODE

- 1. In standby mode, press to select the source of wake up: or buzzer.
2. Press HR, and/or MIN. to set the time of wake up.

STOPPING THE ALARM

Press SNOOZE. The alarm stops and will sound again 9 minutes later.

2 - Alarm stop

Press or . The alarm will sound again the next day at the same time.


3 - Alarm Cancellation

In standby mode, press A to cancel the alarm permanently.

SLEEP FUNCTION

In sleep mode, the unit will turn off automatically after a specified time.

FR



Points de collecte sur www.quefairedesdechets.fr

Privilegiez la réparation ou le don de votre appareil!

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

DIMMER

Press to select the brightness of the screen: high, low or off.

TIME PROJECTION

- 1. Turn on or off the projector with the PROJECTION button.
2. Rotate the projected time by 180° with the ROTATE button.

TECHNICAL SPECIFICATIONS

POWER SUPPLY: AC: 230V ~ 50Hz, 4W consumption
DC: 2x1.5V, battery type AAA/R03/UM-4 (not provided) for back-up

RADIO: FM 87.5-108MHz

Hereby, NEW ONE S.A.S, declares that this MUSE M-179 P is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of electric shock, do not open the device, there is no party inside for the user.

The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.

The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

IMPORTANT

- The use of apparatus in moderate climates.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.

SETTING THE TIME

- 1. In standby mode, press and hold O button, the display will flash, set the time with HR, hour and/or MIN. minutes.

LISTENING TO THE RADIO

- 1. Press O once to turn on the unit.
2. Choose your radio station with left or right arrow.
3. Adjust the volume by right or left arrow to the desired level.

Automatic search

Press and hold for few seconds left or right arrow. The automatic search locates strong stations.

Manual search

- 1. Select a radio station manually or in automatic search.
2. Press and hold "P 01" blinks on the screen.

Manual storage:

- 1. Select a radio station manually or in automatic search.
2. Press and hold "P 01" blinks on the screen.

Listen to station presets

Press and repeat the operation as many times as necessary to select your station.

SETTING THE ALARM AND THE ALARM MODE

- 1. In standby mode, press to select the source of wake up: or buzzer.
2. Press HR, and/or MIN. to set the time of wake up.

STOPPING THE ALARM

Press SNOOZE. The alarm stops and will sound again 9 minutes later.

2 - Alarm stop

Press or . The alarm will sound again the next day at the same time.


3 - Alarm Cancellation

In standby mode, press A to cancel the alarm permanently.

SLEEP FUNCTION

In sleep mode, the unit will turn off automatically after a specified time.

FR



Points de collecte sur www.quefairedesdechets.fr

Privilegiez la réparation ou le don de votre appareil!

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

AJUSTANDO A HORA

- 1. No modo de espera (standby), mantenha pressionado o botão O, e a tela começará a piscar.

TECHNICAL SPECIFICATIONS

POWER SUPPLY: AC: 230V ~ 50Hz, 4W consumption
DC: 2x1.5V, battery type AAA/R03/UM-4 (not provided) for back-up

RADIO: FM 87.5-108MHz

Hereby, NEW ONE S.A.S, declares that this MUSE M-179 P is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of electric shock, do not open the device, there is no party inside for the user.

The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.

The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

IMPORTANT

- The use of apparatus in moderate climates.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.

SETTING THE TIME

- 1. In standby mode, press and hold O button, the display will flash, set the time with HR, hour and/or MIN. minutes.

LISTENING TO THE RADIO

- 1. Press O once to turn on the unit.
2. Choose your radio station with left or right arrow.
3. Adjust the volume by right or left arrow to the desired level.

Automatic search

Press and hold for few seconds left or right arrow. The automatic search locates strong stations.

Manual search

- 1. Select a radio station manually or in automatic search.
2. Press and hold "P 01" blinks on the screen.

Manual storage:

- 1. Select a radio station manually or in automatic search.
2. Press and hold "P 01" blinks on the screen.

Listen to station presets

Press and repeat the operation as many times as necessary to select your station.

SETTING THE ALARM AND THE ALARM MODE

- 1. In standby mode, press to select the source of wake up: or buzzer.
2. Press HR, and/or MIN. to set the time of wake up.

STOPPING THE ALARM

Press SNOOZE. The alarm stops and will sound again 9 minutes later.

2 - Alarm stop

Press or . The alarm will sound again the next day at the same time.


3 - Alarm Cancellation

In standby mode, press A to cancel the alarm permanently.

SLEEP FUNCTION

In sleep mode, the unit will turn off automatically after a specified time.

FR



Points de collecte sur www.quefairedesdechets.fr

Privilegiez la réparation ou le don de votre appareil!

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

CE

NEW ONE S.A.S

10, Rue de la Mission, 25480 Ecole Valentin, France

INSTRUÇÕES DE SEGURANÇA

ATENÇÃO: Para reduzir o risco de choque elétrico, não desmonte o aparelho.

TECHNICAL SPECIFICATIONS

POWER SUPPLY: AC: 230V ~ 50Hz, 4W consumption
DC: 2x1.5V, battery type AAA/R03/UM-4 (not provided) for back-up

RADIO: FM 87.5-108MHz

Hereby, NEW ONE S.A.S, declares that this MUSE M-179 P is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of electric shock, do not open the device, there is no party inside for the user.

The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.

The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

IMPORTANT

- The use of apparatus in moderate climates.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.



